


## Working limits

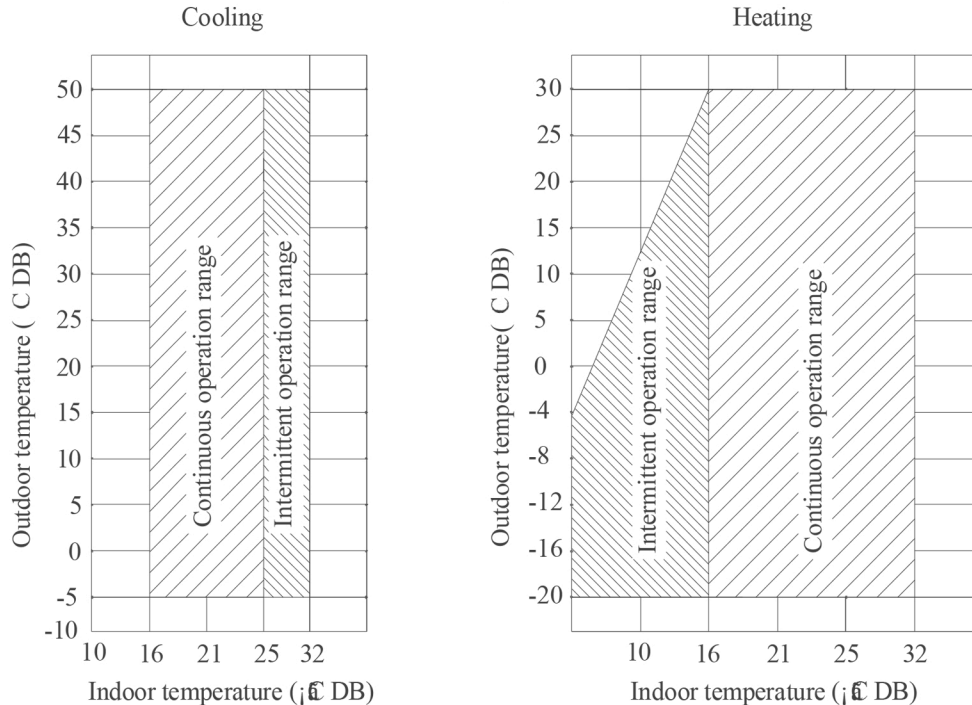

Operation mode	Outdoor temperature	Indoor temperature
Cooling	-5°C ~ 50°C	16°C ~ 32°C
Heating	-20°C ~ 30°C	16°C ~ 32°C

The manufacturer indicates the minimal temperatures - 20°C, but in practice in the European Region, for normal conditioner work the outside temperature can reach -25°C.

If the system works outside of condition above, the protective system will be activated, but then the blocks won't work in normal mode.

Precautionary measures: relative humidity in the room should be lower 80%. If the conditioner works in the environment with a relative humidity higher than mentioned above, the condensate may collect on the surface of the air conditioner. In that case we recommend to set the airflow rate of the indoor unit to a high level.

